

### Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Contact us if any question about the size of platform to ensure the correct fitment











Scan QR code for a fitting demonstration



### Tools Required:

- Hex key (5mm)
- Spanner (13mm,17mm)

### Kit Content

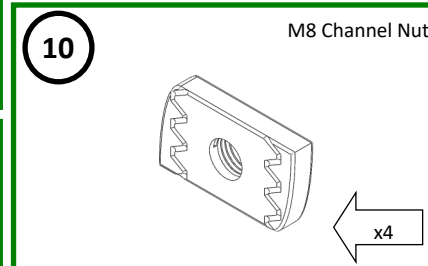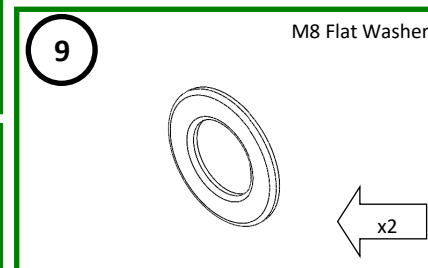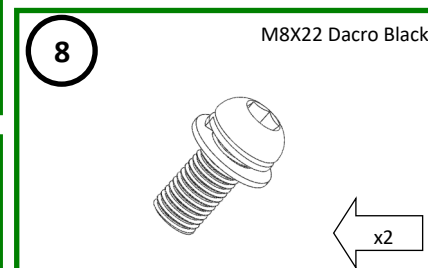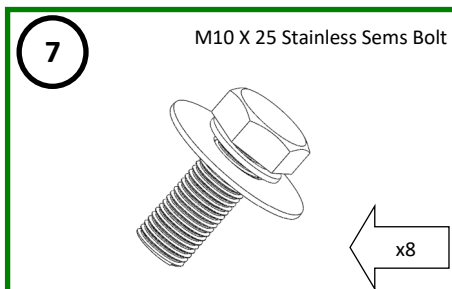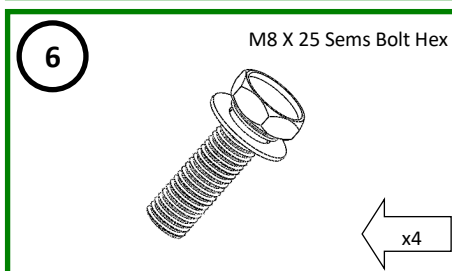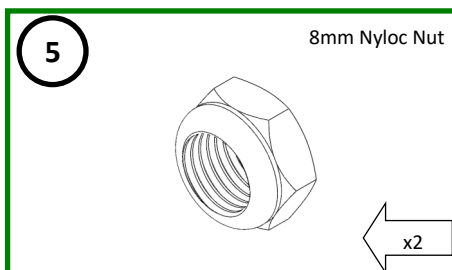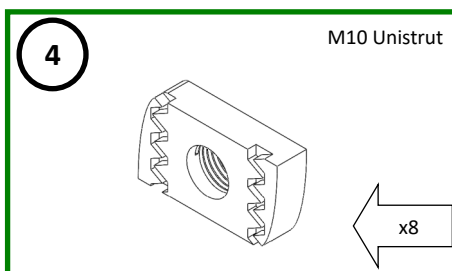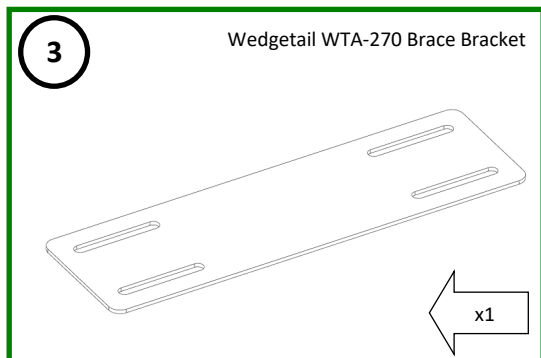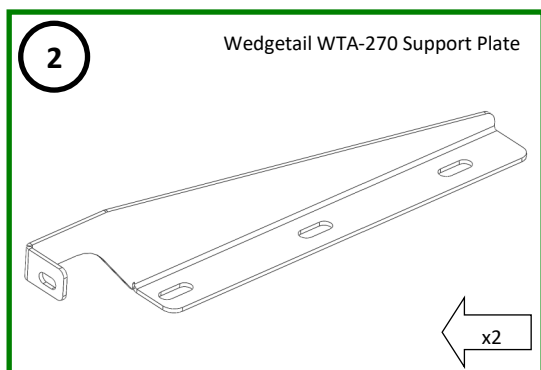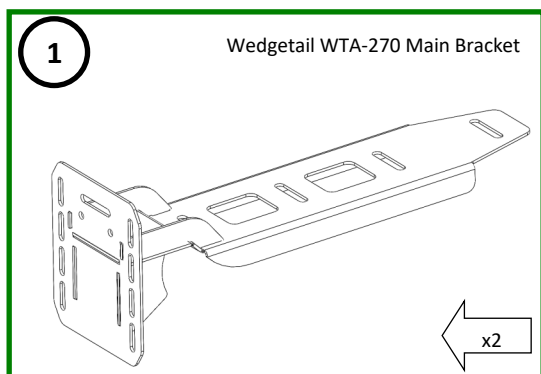

# Wedgetail Accessory Fitting Instruction


## 270 Awning Bracket



WTA-270


1

- Loosely assemble the Main Bracket to Support Plate using M10 Hex Bolts and Washers and Channel Nut. Refer to the diagram.

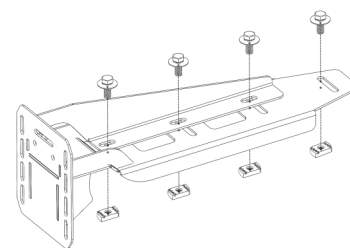

2

- Fasten the M8 X 22mm Bolt and washer using a Nyloc Nut as shown below.

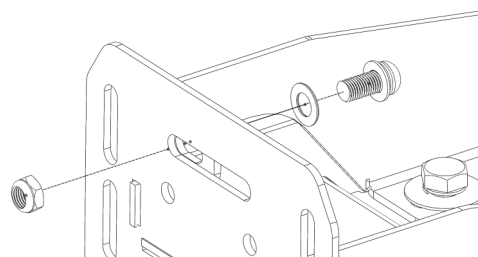

3


- Assemble the bracket on the top of the cross bar using the bolt, washers, and channel nuts. Refer to the diagram.

**NOTE**-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

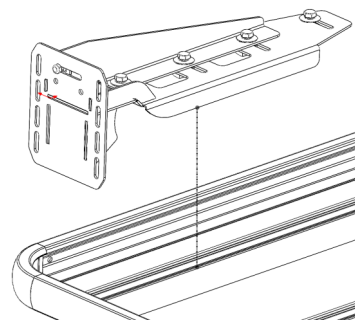

4


- Loosely assemble the brace bracket using the M8X25 Hex Bolt and washer using the channel nuts.

**NOTE**-Ensure the channel nuts are 90 degrees to the channels.




Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

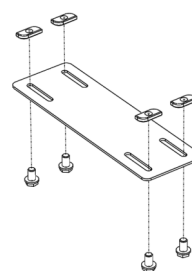

5

- Fasten the bolt by placing the assembled bracket under the rear two crossbars. Refer to the diagram.

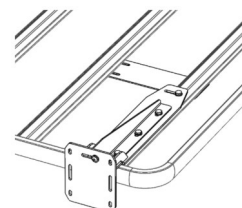

Thank you for your purchase.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration