



Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.


Contact us if any question about the size of platform to ensure the correct fitment

Tools Required:

- Hex Key (5mm)
- Spanner (13mm)

Kit Content


1

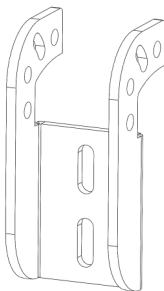

Wedgetail WTA-AB P1

	WTA-AB	WTA-AB3
Qty	2	3


4

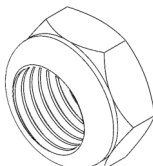

8mm Nyloc Nut

	WTA-AB	WTA-AB3
Qty	8	12


2



Wedgetail WTA-AB P2

	WTA-AB	WTA-AB3
Qty	2	3


5

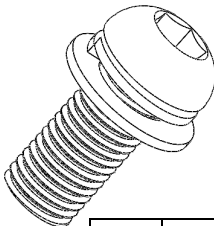

M8X22 Dacro Black

	WTA-AB	WTA-AB3
Qty	4	6


3

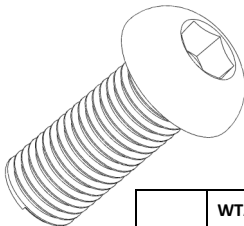

M8 X 20 Button Zinc Socket

	WTA-AB	WTA-AB3
Qty	8	12

6

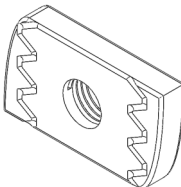

M8 Channel Nut

	WTA-AB	WTA-AB3
Qty	4	6

Wedgetail Accessory Fitting Instruction

Awning Bracket




WTA-AB/WTA-AB3

1

- Choose the desired angle for the Awning Bracket and align the holes.

2

- Use the fasteners provided to assemble and bolt it using M8 Nyloc Nut.

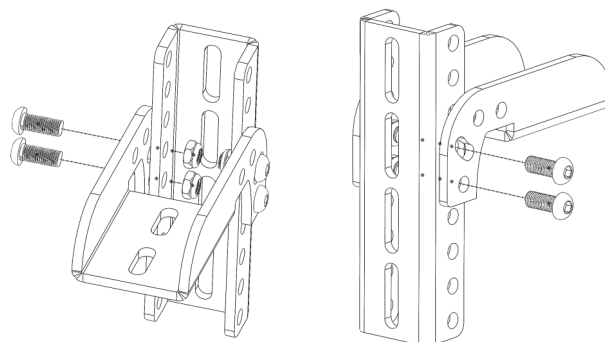

3


- Mount awning bracket to WT platform as shown using M8 Bolts and channel nuts provided.

NOTE-Ensure the channel nuts are 90 degrees to the channels.



Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

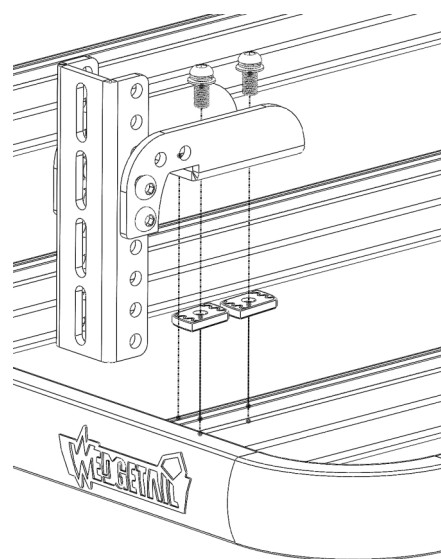

Thank you for your purchase.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration