

Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.

Please read and follow the instructions carefully to ensure correct fitment.

Contact us if any parts appear missing, incorrect, or damaged.

Contact us if any question about the size of platform to ensure the correct fitment








Scan QR code for a fitting demonstration



Tools Required:

- Hex Key (5mm)
- Spanner (19mm)

Kit Content

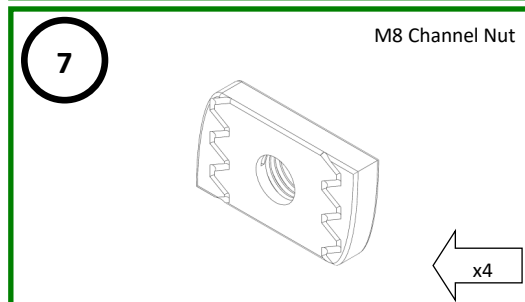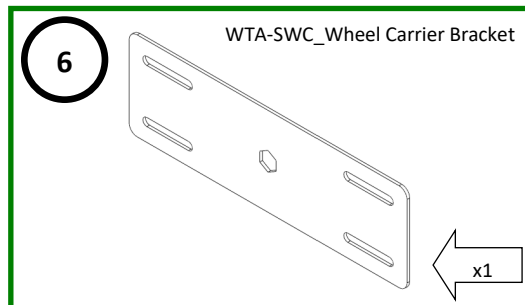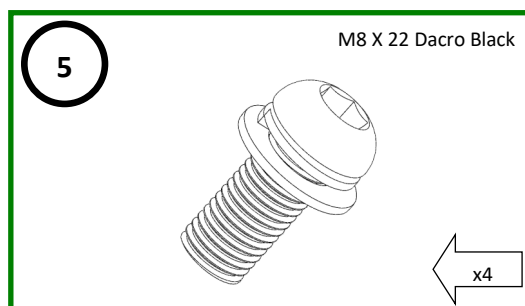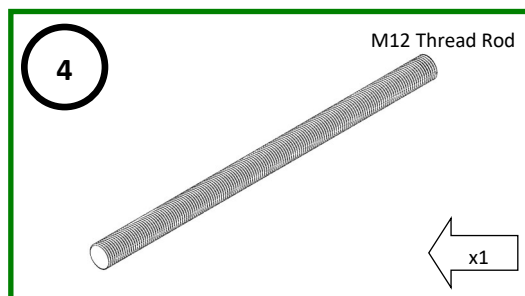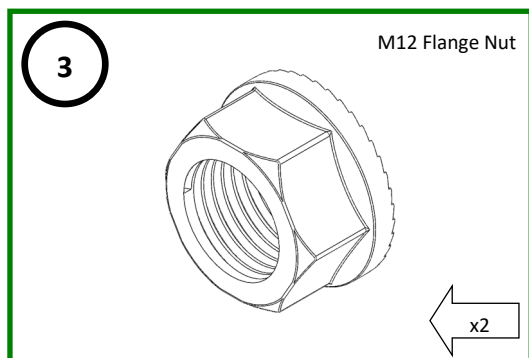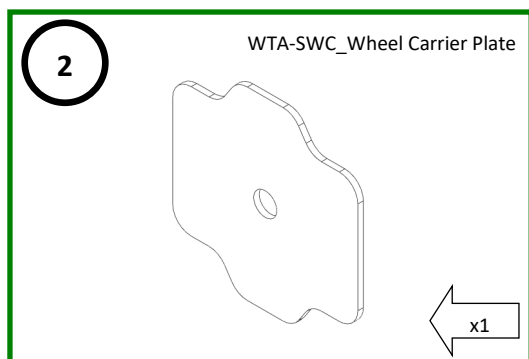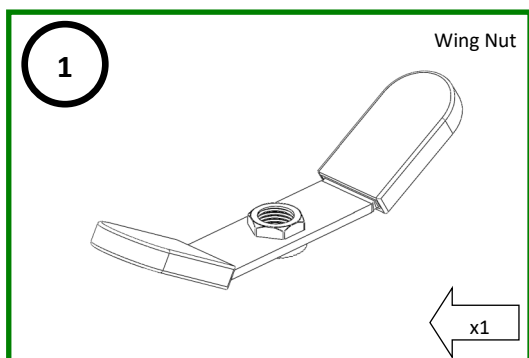

Wedgetail Accessory Spare Wheel Carrier


Fitting Instruction



WTA-SWC

1

- Fasten threaded rod supplied to wheel carrier bracket. Thread through and place M12 Flange Nut supplied nuts one on each side of plate and tighten as shown.

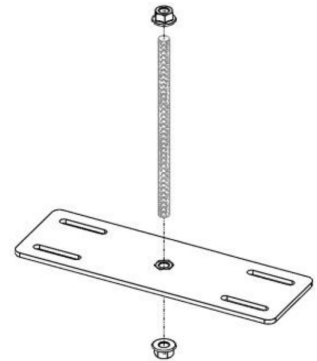

2


- Fasten the Wheel Carrier Bracket to the platform using M8 Stainless bolt and washers and channel nuts. Place the channel nuts in the cross bar and rotate 90 degrees to ensure secure fitment as shown.

NOTE-Ensure the channel nuts are 90 degrees to the channels.




Check fastenings are firmly tensioned at regular intervals.

Do not overtighten, this will preserve the spring washers.

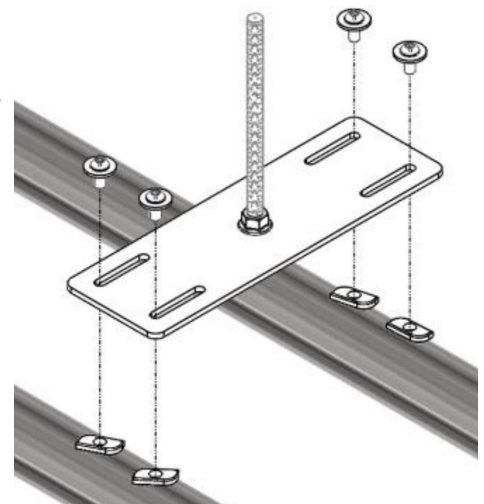

3

- Secure wheel by passing M12 threaded rod through a wheel stud hole and fasten with wing nut and plate supplied.

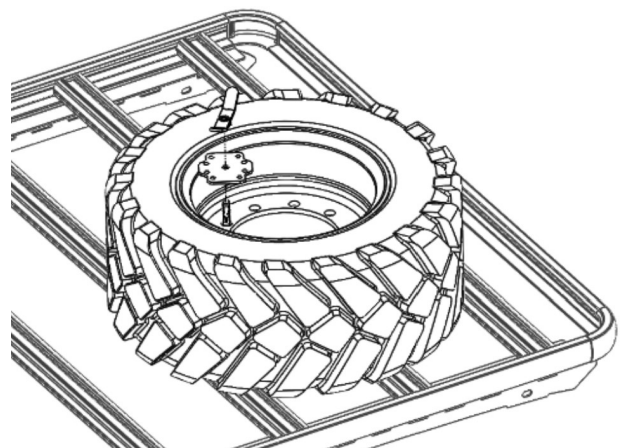

Thank you for your purchase.

Wedgetail by Tradesman Roof Racks

Innovation through Inspiration